



Technical Information
Operating Instructions

GPS161

Incl. Windows Software
GPSMON32

Impressum

Werner Meinberg
Auf der Landwehr 22
D-31812 Bad Pyrmont

Telefon: ++49 (0) 52 81 / 9309-0
Telefax: ++49 (0) 52 81 / 9309-30

Internet: <http://www.meinberg.de>
Email: info@meinberg.de

December 11, 2006

Table of contents

Impressum	2
General information	5
GPS161 features	6
Block diagram GPS161	7
Oszillator options	8
Time zone and daylight saving	8
Pulse outputs	8
Standard frequencies	8
Asynchronous serial ports	9
Enabling of outputs	9
Status outputs	9
/FAIL output	9
LOCK output	9
BSL inputs	10
Installation	10
Power supply	10
Mounting the antenna	11
Powering up the system	11
Replacing the lithium battery	12
Technical specifications GPS161	13
Pin assignments of the contact strip	15
Board dimensions	16
Format of the Meinberg standard time string	17
Format of the Meinberg GPS Time String	18
Format of the SAT time string	19
Format of the NMEA (RMC) string	20
Format of the ABB-SPA timestamp	21

Format of the time string Uni Erlangen (NTP)	22
Format of the Computime Time String	24
Technical specifications of antenna	25
Assembly with CN-UB/E (CN-UB-280DC)	26
Diskette with Windows Software GPSMON.EXE	27
The program GPSMON32	28
Online Help	29

General information

The satellite receiver clock GPS161 has been designed to provide extremely precise time and frequency references. The compact size of the board GPS161 allows easy integration of GPS-controlled timing into synchronization tasks like:

- o **Synchronization of Telecom networks**
- o **Calibration and synchronization of laboratory equipment**
- o **Synchronization of radio transmitters / base stations
(GSM / CDMA / UMTS / DAB / DVB / TETRA)**

The clock has been developed for applications where conventional radio controlled clocks can't meet the growing requirements in precision. High precision available 24 hours a day around the whole world is the main feature of this system which receives its information from the satellites of the Global Positioning System.

The Global Positioning System (GPS) is a satellite-based radio-positioning, navigation, and time-transfer system. It was installed by the United States Department of Defense and provides two levels of accuracy: The Standard Positioning Service (SPS) and the Precise Positioning Service (PPS). While PPS is encrypted and only available for authorized (military) users, SPS has been made available to the general public.

GPS is based on accurately measuring the propagation time of signals transmitted from satellites to the user's receiver. A nominal constellation of 21 satellites together with 3 active spares in six orbital planes 20000 km over ground provides a minimum of four satellites to be in view 24 hours a day at every point of the globe. Four satellites need to be received simultaneously if both receiver position (x, y, z) and receiver clock offset from GPS system time must be computed. All the satellites are monitored by control stations which determine the exact orbit parameters as well as the clock offset of the satellites' on-board atomic clocks. These parameters are uploaded to the satellites and become part of a navigation message which is retransmitted by the satellites in order to pass that information to the user's receiver.


The high precision orbit parameters of a satellite are called ephemeris parameters whereas a reduced precision subset of the ephemeris parameters is called a satellite's almanac. While ephemeris parameters must be evaluated to compute the receiver's position and clock offset, almanac parameters are used to check which satellites are in view from a given receiver position at a given time. Each satellite transmits its own set of ephemeris parameters and almanac parameters of all existing satellites.

GPS161 features

The satellite receiver clock GPS161 is as a compact board with dimensions of 80 x 120 mm. The module contains four mounting holes (diameter 3 mm) for easy integration into the application of the user. The power supply and input/output signals are available via a 26-pole contact strip. The receiver is connected to the antenna/converter unit via a BNC-connector by using a 50 Ω-coaxial cable with a length of up to 300 m. It is possible to connect up to four receivers to one antenna by using an optional antenna diplexer.

The navigation message coming from the satellites is decoded by GPS161's microprocessor. Depending on the oscillator option the GPS system time is tracked with an accuracy of better than ±250 nsec (TCXO HQ/OCXO LQ) or ±100 nsec (OCXO MQ/OCXO HQ). Compensation of the RF signal's propagation delay is done by automatical determination of the receiver's position on the globe. A correction value computed from the satellites' navigation messages increases the accuracy of the board's master oscillator and automatically compensates its aging. The last recent value is restored from the battery buffered memory at power-up.

Block diagram GPS161

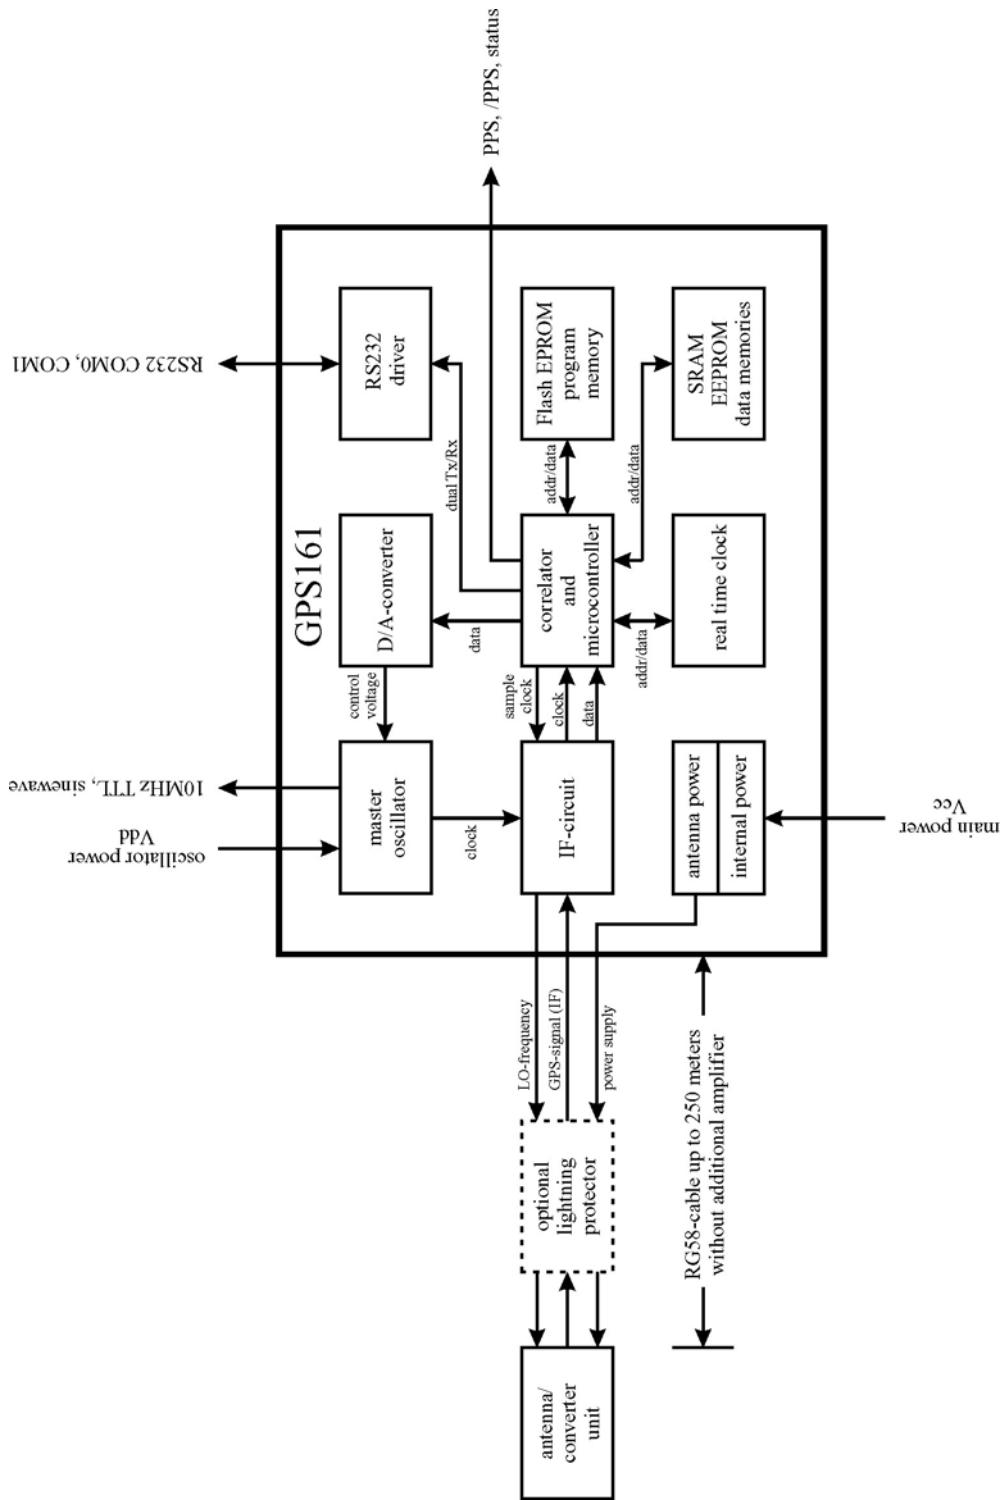

Oszillator options

To realize various requirements concerning the accuracy of the frequency outputs, the module GPS161 may be equipped with different master oscillators. They are disciplined by the GPS-system for compensation of long term effects like aging and temperature dependant drift. However, phase locking of the standard frequency to the pulse per second (PPS) is only available with the oscillator option ‘OCXO MQ’ or ‘OCXO HQ’. The specifications for the different oscillators can be found in chapter ‘Technical specifications GPS161’. **A label on the board shows the oscillator option of the present GPS161.**

Time zone and daylight saving

GPS system time differs from the universal time scale (UTC) by the number of leap seconds which have been inserted into the UTC time scale after GPS has been initiated in 1980. The current number of leap seconds is part of the navigation message supplied by the satellites, so GPS161’s internal real time is based on UTC.

Conversion to local time including handling of daylight saving year by year can be done by the receiver’s microprocessor if the corresponding parameters are set up with the help of the software GPSMON32 (included Windows software).

Pulse outputs

The pulse generator of the satellite controlled clock GPS161 generates a high- and a low-active pulse per second (PPS) with a pulse duration of 1msec, which are available at the contact strip. The turn-on slope of these pulses is phase aligned to UTC-second.

Standard frequencies

The module GPS161 provides two frequency outputs of 10 MHz which are derived from the master oscillator of the board. If oscillator option ‘OCXO MQ’ or ‘OCXO HQ’ was equipped, these standard frequencies are phase locked to the pulse per second. A TTL- and a sinewave output are available at the contact strip.

Asynchronous serial ports

Two asynchronous serial interfaces (RS-232) called COM0 and COM1 are available to the user. Transmission speeds, framings and the kind of the time string can be configured separately. The serial ports are sending a time string either once per second, once per minute or on request with ASCII ‘?’ only. Possible time strings are ‘Meinberg Standard’, ‘SAT’, ‘UNI Erlangen (NTP)’, ‘ABB-SPA’ or ‘NMEA (RMC)’, see the technical specifications for details. Furthermore, the serial interface COM0 is used for communication with the monitor program. A possible firmware update is also done via this serial channel.

Enabling of outputs

In the default mode of operation the pulse outputs and the serial interfaces are disabled until the receiver has synchronized after power-up. However, with the help of GPS-MON32 the system can be configured to enable those outputs immediately after power-up. This option can be set for each group of signals (pulses and serial interfaces) separately.

Status outputs

The satellite receiver clock GPS161 provides two TTL-outputs (/FAIL and LOCK) for handing-over the status of synchronization of timing and calculation of position to post-connected systems. These outputs can be used for driving LEDs via an external resistor ($R_{\min} = 470 \Omega$).

/FAIL output

The ‘/FAIL’ output switches to TTL high level whenever the internal timing of the receiver is synchronous to the GPS-system.

LOCK output

The ‘LOCK’ output switches to TTL high level if the receiver has acquired at least four satellites and has computed its position after power-up. In normal operation the receiver position is updated continuously as long as at least four satellites can be received. When the receiver’s position is known and steady only, a single satellite needs to be received for synchronization and generation of output pulses.

BSL inputs

Whenever the on-board software must be upgraded or modified, the new firmware can be downloaded to the internal flash memory using the serial port COM0. There is no need to insert a new EPROM.

The contacts of a key have to be connected to the BSL inputs of GPS161. If this key is pressed while the power supply of the module is switched on, a bootstrap-loader is activated and waits for instructions from the serial port COM0. The new firmware can be sent to GPS161 from any standard PC with serial interface. A loader program will be shipped together with the file containing the image of the new firmware.

The contents of the program memory will not be modified until the loader program has sent the command to erase the flash memory. So, if the BSL key is pressed unintentionally, the firmware will not be changed accidentally. After the next power-up, the system will be ready to operate again.

Installation

Power supply

The module GPS161 has two independent paths for connecting the power supply. The main supply of +5 V must be connected to the contacts ‘VCC’ of the contact strip (see pin assignments in ‘Technical specifications GPS161’). The supply for the master oscillator (‘VDD’, +5V) is separated from these contacts, because disturbing voltages on the power lead could decrease the short term stability of the oscillator.

It is possible to use only one +5 V-output of a power supply for connecting the receiver module and the oscillator. The ‘VCC’ and ‘VDD’ inputs should have separate leads from the power supply in this case. The contacts for the reference potential are connected internally. To achieve a good EMC-behaviour of GPS161 as much ‘GND’ pins of the contact strip as possible should be connected to the ground potential of the power supply directly.

Mounting the antenna

The GPS satellites are not stationary but circle round the globe in a period of about 12 hours. They can only be received if no building is in the line-of-sight from the antenna to the satellite, so the antenna/converter unit must be installed in a location from which as much of the sky as possible can be seen. The best reception is given when the antenna has a free view of 8° angular elevation above horizon. If this is not possible the antenna should be installed with a mostly free view to the equator because of the satellite courses which are located between latitudes of 55° North and 55° South. If even this is not possible problems occur especially when at least four satellites for positioning have to be found.

The unit can be mounted using a pole with a diameter up to 60 mm. A standard coaxial cable with 50 Ω impedance (e.g. RG58C) should be used to connect the antenna/converter unit to the receiver. Cable thinner than RG58 should be avoided due to its higher DC resistance and RF attenuation. When using the optional antenna diplexer the total length of one antenna line between antenna, diplexer and receiver must not be longer than 300 m. If a cable with less attenuation is used its length may be increased accordingly (e.g. 600 m with RG213).



If the antenna cable was canned by the user: before powering up the system, make sure that there is no short-circuit between the inner and outer conductor of the antenna cable, because this could cause a fault of GPS161.

Powering up the system

If both, the antenna and the power supply have been connected, the system is ready to operate. About 10 seconds (OCXO MQ: 1 minute, OCXO HQ: 3 minutes) after power-up the receiver's master oscillator has warmed up and operates with the required accuracy. If the receiver finds valid almanac and ephemeris data in its battery buffered memory and the receiver's position has not changed significantly since its last operation the receiver can find out which satellites are in view now. Only a single satellite needs to be received to synchronize and generate output pulses, so synchronization can be achieved maximally one minute after power-up.

If the receiver position has changed by some hundred kilometers since last operation, the satellites' real elevation and doppler might not match those values expected by the receiver thus forcing the receiver to start scanning for satellites. This mode is called **Warm Boot** because the receiver can obtain ID numbers of existing satellites from the valid almanac. When the receiver has found four satellites in view it can update its new position and switch to **Normal Operation**. If the almanac has been lost because the battery had been disconnected the receiver has to scan for a satellite and read in the current almanacs. This mode is called **Cold Boot**. It takes 12 minutes until the new almanac is complete and the system switches to Warm Boot mode scanning for other satellites.

Replacing the lithium battery

The life time of the lithium battery on the board is at least 10 years. If the need arises to replace the battery, the following should be noted:

ATTENTION!

Danger of explosion in case of inadequate replacement of the lithium battery. Only identical batteries or batteries recommended by the manufacturer must be used for replacement. The waste battery must be disposed as proposed by the manufacturer of the battery.

Technical specifications GPS161

RECEIVER:	6 channel C/A code receiver with external antenna/converter unit
ANTENNA:	Antenna/converter unit with remote power supply refer to chapter 'Technical specifications of antenna'
ANTENNA INPUT:	Antenna circuit dc-insulated; dielectric strength: 1000V _{DC} Length of cable: refer to chapter 'Mounting the antenna'
TIME TO SYNCHRONIZATION:	one minute with known receiver position and valid almanac 12 minutes if invalid battery buffered memory
BATTERY BACKUP:	storage of important GPS-system data in the internal RAM, backed-up by lithium battery lifetime of battery 10 years min.
PULSE OUTPUTS:	pulses per second (PPS) high- and low-active pulses TTL into 50 Ω pulse duration 1 msec turn-on slope phase aligned to UTC-second mode of operation 'if sync'
ACCURACY OF PULSES:	after synchronization and 20 minutes of operation TCXO HQ/OCXO LQ : better than ±250 nsec OCXO MQ/OCXO HQ : better than ±100 nsec better than ±2 μsec during the first 20 minutes of operation
FREQUENCY OUTPUTS:	one 10 MHz output at a time with: TTL into 50 Ω sinewave, 0.5 V _{rms} into 50 Ω

OSCILLATOR-SPECIFICATIONS:

	TCXO	OCXO LQ	OCXO MQ	OCXO HQ
short term stability $\tau = 1 \text{ sec}$	$2 * 10 \text{ E-9}$	$1 * 10 \text{ E-9}$	$2 * 10 \text{ E-10}$	$1 * 10 \text{ E-11}$
accuracy free run one day	$+/- 1 * 10 \text{ E-7}$ $+/- 1 \text{ Hz} (\text{Note 1})$	$+/- 2 * 10 \text{ E-8}$ $+/- 0.2 \text{ Hz} (\text{Note 1})$	$+/- 1.5 * 10 \text{ E-9}$ $+/- 15 \text{ mHz} (\text{Note 1})$	$+/- 5 * 10 \text{ E-10}$ $+/- 5 \text{ mHz} (\text{Note 1})$
accuracy free run one year	$+/- 1 * 10 \text{ E-6}$ $+/- 10 \text{ Hz} (\text{Note 1})$	$+/- 4 * 10 \text{ E-7}$ $+/- 4 \text{ Hz} (\text{Note 1})$	$+/- 1 * 10 \text{ E-7}$ $+/- 1 \text{ Hz} (\text{Note 1})$	$+/- 5 * 10 \text{ E-8}$ $+/- 0.5 \text{ Hz} (\text{Note 1})$
accuracy GPS-synchronous averaged 24 h	$+/- 1 * 10 \text{ E-11}$	$+/- 1 * 10 \text{ E-11}$	$+/- 5 * 10 \text{ E-12}$	$+/- 1 * 10 \text{ E-12}$
phase noise	1 Hz -60 dBc/Hz 10 Hz -90 dBc/Hz 100 Hz -120 dBc/Hz 1 kHz -130 dBc/Hz	1 Hz -60 dBc/Hz 10 Hz -90 dBc/Hz 100 Hz -120 dBc/Hz 1 kHz -130 dBc/Hz	1 Hz -75 dBc/Hz 10 Hz -110 dBc/Hz 100 Hz -130 dBc/Hz 1 kHz -140 dBc/Hz	1 Hz -95 dBc/Hz 10 Hz -125 dBc/Hz 100 Hz -145 dBc/Hz 1 kHz -155 dBc/Hz
power supply at 25°C steady state warm up	+5V / 20 mA N/A	+5V / 160 mA +5V / 380 mA	+5V / 300 mA +5V / 700 mA	+5V / 300 mA +5V / 700 mA
temperature dependant drift free run	$+/- 1 * 10 \text{ E-6}$ (-20...70°C)	$+/- 2 * 10 \text{ E-7}$ (0...60°C)	$+/- 5 * 10 \text{ E-8}$ (-20...70°C)	$+/- 1 * 10 \text{ E-8}$ (5...70°C)

Note 1:

The accuracy in Hertz is based on the standard frequency of 10 MHz. For example:
Accuracy of TCXO (free run one day) is $+/- 1 * 10 \text{ E-7} * 10 \text{ MHz} = +/- 1 \text{ Hz}$

SERIAL PORTS: 2 independant asynchronous serial ports (RS-232)

COM0 and COM1 can be configured seperately

Baud Rate: 300 up to 19200

Framing: 7N2, 7E1, 7E2, 8N1, 8N2, 8E1

time string selectable for COM0 and COM1

‘Standard Meinberg’

‘SAT’

‘Uni Erlangen (NTP)’

‘ABB-SPA’

‘NMEA (RMC)’

default settings: COM0: 19200, 8N1

COM1: 9600, 8N1

‘Standard Meinberg’ for COM0 and COM1

time string per second

mode of operation ‘if sync’

STATUS

INDICATION: receiver status for a TTL-high output:

Lock: the receiver was able to compute its position after power-up

/Fail: the internal timing of the receiver is synchronous to the GPS-system

POWER

REQUIREMENTS: VCC: +5V, e.g. 560 mA
VDD: +5V, current consumption see
table ‘Oscillator specifications’

BOARD

DIMENSION: 80 mm x 120 mm x 17.5 mm (width x length x height)

CONNECTORS: coaxial BNC connector for antenna/converter unit
26-pole (2 x 13) contact strip

AMBIENT

TEMPERATURE: 0 ... 50°C


HUMIDITY: 85% max.

Pin assignments of the contact strip

The contact strip of GPS161 is assigned as shown below (top view, orientation as shown in chapter ‘Board dimensions’):

	1 2	
10MHz sinewave		GND
10MHz TTL		GND
Power supply oscillator,VDD (+5V)		Power supply oscillator,VDD
GND		GND
Power supply,VCC (+5V)		Power supply,VCC (+5V)
RS232, TxD0		RS232, RxD0
RS232, TxD1		RS232, RxD1
GND		GND
BSL1		BSL2
GND		GND
/PPS, TTL, low active		PPS, TTL, high active
/Fail		Lock
GND		GND
	25 26	

Board dimensions

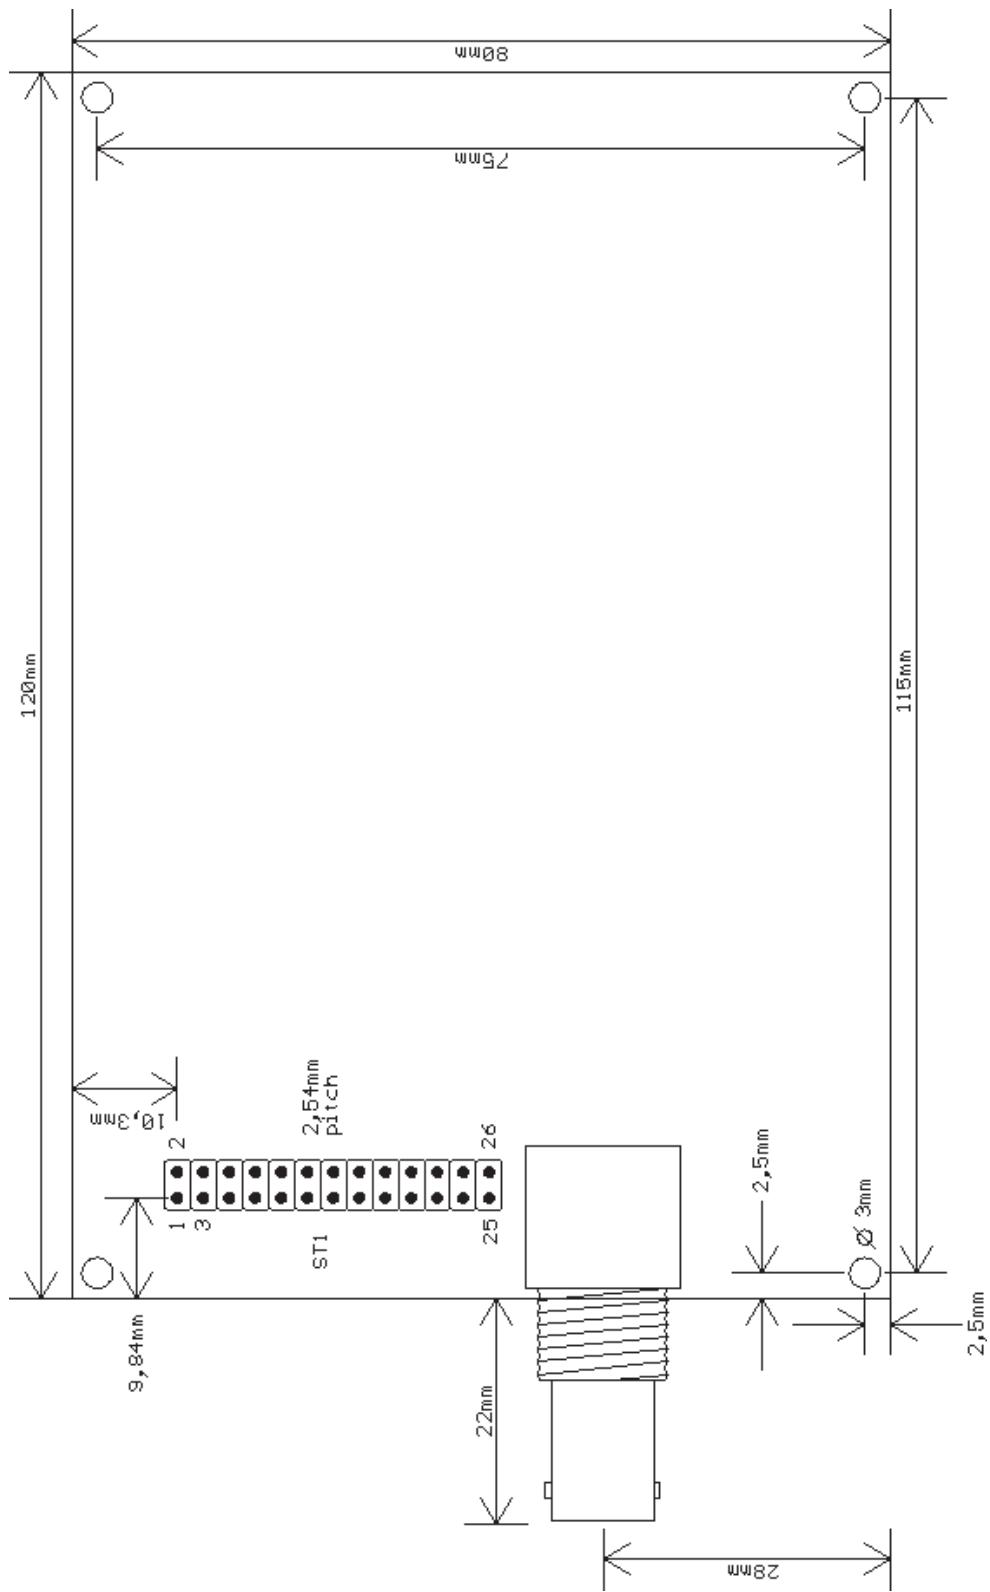

Format of the Meinberg standard time string

The Meinberg standard time string is a sequence of 32 ASCII characters starting with the STX (start-of-text) character and ending with the ETX (end-of-text) character. The format is:

<STX>**D:dd.mm.yy;T:w;U:hh.mm.ss;uvxy**<ETX>

The letters printed in *italics* are replaced by ASCII numbers whereas the other characters are part of the time string. The groups of characters as defined below:

<STX> Start-Of-Text (ASCII code 02h)

dd.mm.yy the current date:

<i>dd</i>	day of month	(01..31)
<i>mm</i>	month	(01..12)
<i>yy</i>	year of the century	(00..99)

w the day of the week (1..7, 1 = Monday)

hh.mm.ss the current time:

<i>hh</i>	hours	(00..23)
<i>mm</i>	minutes	(00..59)
<i>ss</i>	seconds	(00..59, or 60 while leap second)

uv clock status characters:

u: '#' clock has not synchronized after reset
‘ ‘ (space, 20h) clock has synchronized after reset

v: different for DCF77 or GPS receivers:

‘*’ DCF77 clock currently runs on XTAL
GPS receiver has not checked its position

‘ ‘ (space, 20h) DCF77 clock is sync'd with transmitter
GPS receiver has determined its position

x time zone indicator:

‘U’ UTC Universal Time Coordinated, formerly GMT
‘ ‘ MEZ European Standard Time, daylight saving disabled
‘S’ MESZ European Summertime, daylight saving enabled

y announcement of discontinuity of time, enabled during last hour
before discontinuity comes in effect:

‘!’ announcement of start or end of daylight saving time
‘A’ announcement of leap second insertion
‘ ‘ (space, 20h) nothing announced

<ETX> End-Of-Text (ASCII code 03h)

Format of the Meinberg GPS Time String

The Meinberg Standard Time String is a sequence of 36 ASCII characters starting with the STX (start-of-text) character and ending with the ETX (end-of-text) character. Contrary to the Meinberg Standard Telegram the Meinberg GPS Timestring carries no local timezone or UTC but the direct GPS time without conversion into UTC.

The format is:

<STX>**D:tt.mm.jj;T:w;U:hh.mm.ss;uvGy;lll**<ETX>

The letters printed in *italics* are replaced by ASCII numbers whereas the other characters are part of the time string. The groups of characters as defined below:

<STX>	Start-Of-Text (ASCII code 02h)
<i>dd.mm.yy</i>	the current date: <i>dd</i> day of month (01..31) <i>mm</i> month (01..12) <i>yy</i> year of the century (00..99)
<i>w</i>	the day of the week (1..7, 1 = Monday)
<i>hh.mm.ss</i>	the current time: <i>hh</i> hours (00..23) <i>mm</i> minutes (00..59) <i>ss</i> seconds (00..59, or 60 while leap second)
<i>uv</i>	clock status characters (depending on clock type): <i>u</i> : '#' GPS: clock is running free (without exact synchr.) ' ' (space, 20h) GPS: clock is synchronous (base accuracy is reached) <i>v</i> : '*' GPS: receiver has not checked its position ' ' (space, 20h) GPS: receiver has determined its position
G	time zone indicator 'GPS-Time'
<i>y</i>	anouncement of discontinuity of time, enabled during last hour before discontinuity comes in effect: 'A' announcement of leap second insertion ' ' (space, 20h) nothing announced
<i>lll</i>	Number of leap seconds between UTC and GPS-Time (UTC = GPS-Time + number of leap seconds)
<ETX>	End-Of-Text (ASCII code 03h)

Format of the SAT time string

The SAT time string is a sequence of 29 ASCII characters starting with the STX (start-of-text) character and ending with the ETX (end-of-text) character. The format is:

<STX>*tt.mm.jj/w/hh:mm:ssMEzzxy*<CR><LF><ETX>

The letters printed in *italics* are replaced by ASCII numbers whereas the other characters are part of the time string. The groups of characters as defined below:

<STX> Start-Of-Text (ASCII code 02h)

dd.mm.yy the current date:

<i>dd</i>	day of month	(01..31)
<i>mm</i>	month	(01..12)
<i>yy</i>	year of the century	(00..99)

w the day of the week (1..7, 1 = Monday)

hh:mm:ss the current time:

<i>hh</i>	hours	(00..23)
<i>mm</i>	minutes	(00..59)
<i>ss</i>	seconds	(00..59, or 60 while leap second)

zz time zone indicator:

‘Z’ MEZ European Standard Time, daylight saving disabled
‘SZ’ MESZ European Summertime, daylight saving enabled

x clock status characters:

‘*’ DCF77 clock currently runs on XTAL
GPS receiver has not checked its position

‘ ‘ (space, 20h) DCF77 clock is sync’d with transmitter
GPS receiver has determined its position

y announcement of discontinuity of time, enabled during last hour before discontinuity comes in effect:

‘!’ announcement of start or end of daylight saving time
‘ ‘ (space, 20h) nothing announced

<CR> Carriage return (ASCII code 0Dh)

<LF> Line feed (ASCII code 0Ah)

<ETX> End-Of-Text (ASCII code 03h)

Format of the NMEA (RMC) string

The NMEA String is a sequence of 65 ASCII characters starting with the ‘\$’ character and ending with the characters CR (carriage return) and LF (line-feed). The format is:

\$GPRMC, hhmmss.ss, A, bbbb.bb, n, llll.ll, e, 0.0, 0.0, ddmmyy, 0.0, a*hh<CR><LF>

The letters printed in *italics* are replaced by ASCII numbers or letters whereas the other characters are part of the time string. The groups of characters as defined below:

\$	start character (ASCII-Code 24h)
<i>hhmmss.ss</i>	the current time: <i>hh</i> hours (00..23) <i>mm</i> minutes (00..59) <i>ss</i> seconds (00..59, or 60 while leap second) <i>ss</i> fractions of seconds (1/10 ; 1/100)
A	Status (A = time data valid) (V = time data not valid)
<i>bbbb.bb</i>	latitude of receiver position in degrees leading signs are replaced by a space character (20h)
<i>n</i>	latitude, the following characters are possible: 'N' north of equator 'S' south d. equator
<i>llll.ll</i>	longitude of receiver position in degrees leading signs are replaced by a space character (20h)
<i>e</i>	longitude, the following characters are possible: 'E' east of Greenwich 'W' west of Greenwich
<i>ddmmyy</i>	the current date: <i>dd</i> day of month (01..31) <i>mm</i> month (01..12) <i>yy</i> year of the century (00..99)
<i>a</i>	magnetic variation
<i>hh</i>	checksum (EXOR over all characters except '\$' and '*')
<CR>	carriage-return; ASCII-Code 0Dh
<LF>	line-feed; ASCII-Code 0Ah

Format of the ABB-SPA timestring

The ABB SPA timestring is a sequence of 32 ASCII characters starting with the characters ">900WD" and ending with the <CR> (Carriage Return) character. The format is:

>900WD:*yy-mm-tt hh.mm:ss.fff:cc*<CR>

The letters printed in *italics* are replaced by ASCII numbers whereas the other characters are part of the time string. The groups of characters as defined below:

yy-mm-tt the current date:

yy year of the century (00..99)
mm month (01..12)
dd day of month (01..31)

– Space (ASCII code 20h)

hh.mm:ss.fff the current time:

hh hours (00..23)
mm minutes (00..59)
ss seconds (00..59, or 60 while leap second)
fff milliseconds (000..999)

cc Check sum. EXCLUSIVE-OR result of the previous characters, displayed as a HEX byte (2 ASCII characters 0..9 or A..F)

<CR> Carriage Return (ASCII code 0Dh)

Format of the time string Uni Erlangen (NTP)

The time string Uni Erlangen (NTP) of a **GPS-clock** is a sequence of 66 ASCII characters starting with the STX (start-of-text) character and ending with the ETX (end-of-text) character. The format is:

<STX>*tt.mm.jj; w; hh:mm:ss; voo:oo; acdfg i;bbb.bbbbn lll.llle hhhhm*<ETX>

The letters printed in *italics* are replaced by ASCII numbers whereas the other characters are part of the time string. The groups of characters as defined below:

<STX> Start-Of-Text (ASCII code 02h)

dd.mm.yy the current date:

<i>dd</i>	day of month	(01..31)
<i>mm</i>	month	(01..12)
<i>yy</i>	year of the century	(00..99)

w the day of the week (1..7, 1 = Monday)

hh.mm.ss the current time:

<i>hh</i>	hours	(00..23)
<i>mm</i>	minutes	(00..59)
<i>ss</i>	seconds	(00..59, or 60 while leap second)

v sign of the offset of local timezone related to UTC

oo:oo offset of local timezone related to UTC in hours and minutes

ac clock status characters:

<i>a:</i>	'#' clock has not synchronized after reset
	' ' (space, 20h) clock has synchronized after reset

<i>c:</i>	'*' GPS receiver has not checked its position
	' ' (space, 20h) GPS receiver has determined its position

d time zone indicator:

'S'	MESZ European Summertime, daylight saving enabled
' '	MEZ European Standard Time, daylight saving disabled

f announcement of discontinuity of time, enabled during last hour before discontinuity comes in effect:

'!'	announcement of start or end of daylight saving time
' '	(space, 20h) nothing announced

g announcement of discontinuity of time, enabled during last hour before discontinuity comes in effect:

'A'	announcement of leap second insertion
' '	(space, 20h) nothing announced

<i>i</i>	leap second insertion ‘L’ leap second is actually inserted (active only in 60th sec.) ‘ ‘ (space, 20h) no leap second is inserted
<i>bbb.bbbb</i>	latitude of receiver position in degrees leading signs are replaced by a space character (20h)
<i>n</i>	latitude, the following characters are possible: ‘N’ north of equator ‘S’ south of equator
<i>lll.llll</i>	longitude of receiver position in degrees leading signs are replaced by a space character (20h)
<i>e</i>	longitude, the following characters are possible: ‘E’ east of Greenwich ‘W’ west of Greenwich
<i>hhh</i>	altitude above sea level in meters leading signs are replaced by a space character (20h)
<ETX>	End-Of-Text (ASCII-code 03h)

Format of the Computime Time String

The Computime time string is a sequence of 24 ASCII characters starting with the T character and ending with the LF (line feed, ASCII Code 0Ah) character. The format is:

T:*yy:mm:dd:ww:hh:mm:ss*<CR><LF>

The letters printed in *italics* are replaced by ASCII numbers whereas the other characters are part of the time string. The groups of characters as defined below:

T Start character

yy:mm:dd the current date:

yy year of the century (00..99)
 mm month (01..12)
 dd day of month (01..31)

ww the day of the week (01..07, 01 = monday)

hh:mm:ss the current time:

hh hours (00..23)
 mm minutes (00..59)
 ss seconds (00..59, or 60 while leap second)

<CR> Carriage-return (ASCII code 0Dh)

<LF> Line-feed (ASCII code 0Ah)

Technical specifications of antenna

ANTENNA: dielectrical patch antenna, 25 x 25mm
receive frequency: 1575.42 MHz
bandwidth: 9 MHz

CONVERTER: local oscillator to converter frequency: 10 MHz
first IF frequency: 35.4 MHz

POWER

REQUIREMENTS: 12V ... 18V, @ 100mA (provided via antenna cable)


CONNECTOR: coax type N, female

AMBIENT


TEMPERATURE: -25 ... +65°C


HOUSING: ABS plastic case for outdoor installation (IP56)

PHYSICAL DIMENSION:

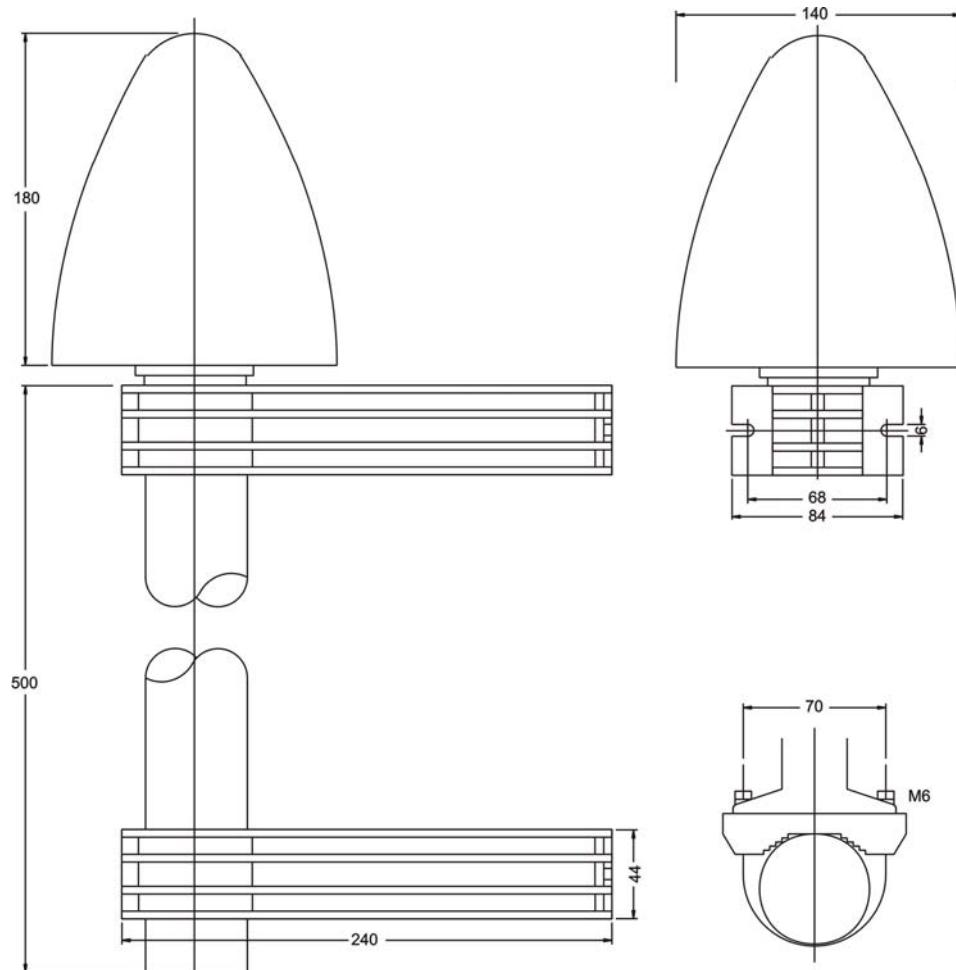

Assembly with CN-UB/E (CN-UB-280DC)

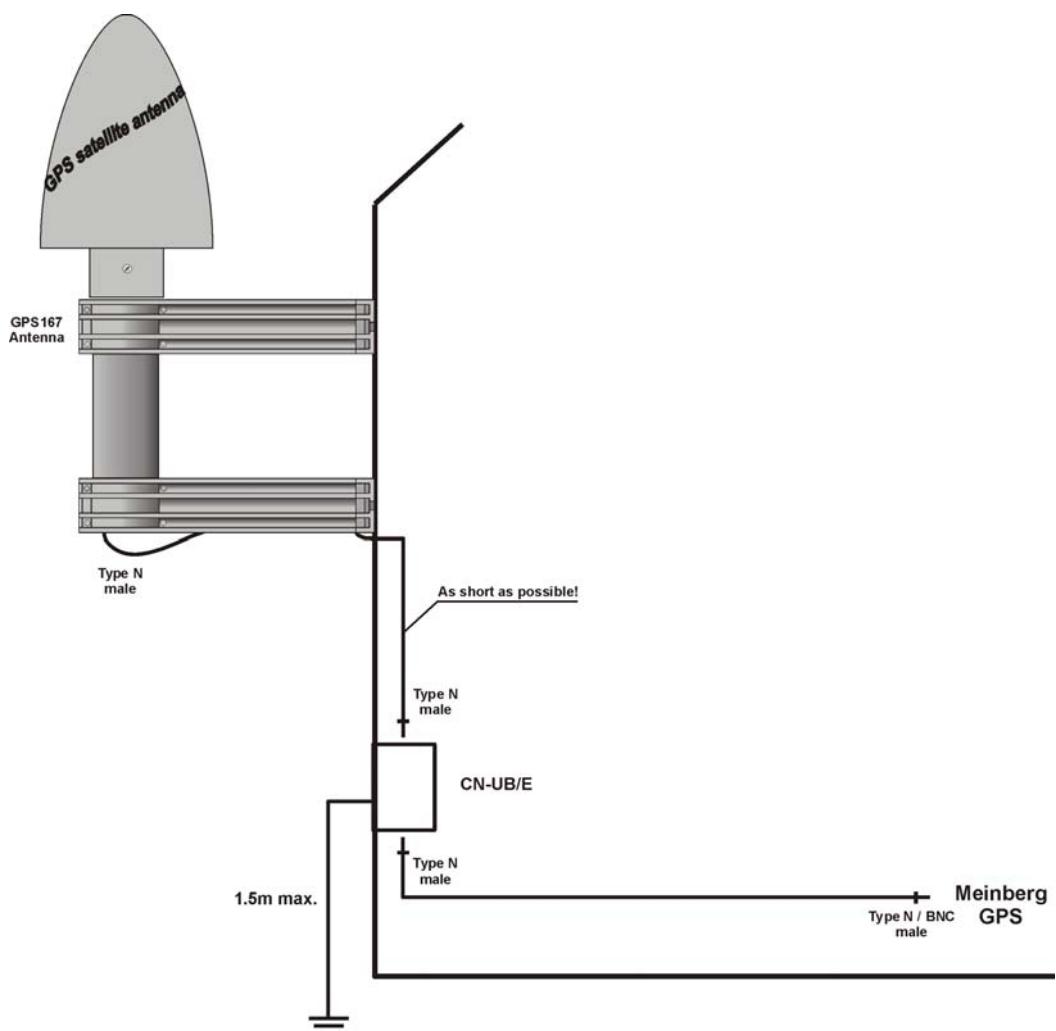

 


Diskette with Windows Software GPSMON.EXE


The program GPSMON32

The program GPSMON32 can be used to monitor and program all essential functions of Meinberg GPS-receivers. The Software is executable under Win9x/2k/NT. To install GPSMON32 just run Setup.exe from the included diskette and follow the instructions of the setup program.

To obtain a connection between your PC and the GPS-receiver, connect the receivers COM0 port to a free serial port of your PC. The PCs comport used by the program GPSMON32 can be selected in submenu 'PC-Comport' in menu 'Connection'.

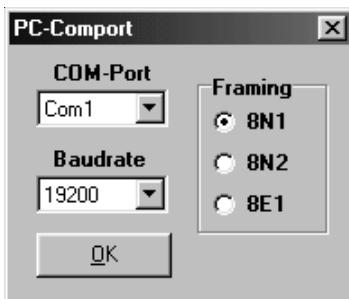

Also transfer rate and framing used by the program are selected in this menu. Communication between the clock and the PC comes about, only if the GPS serial port is configured in the same way as the PCs comport. You can enforce an access, if the GPS serial port is not configured with appropriate parameters for communication. Select the menu item '**Enforce Connection**' in menu '**Connection**' and click '**Start**' in the appearing window. Some firmware versions of GPS167 do not support this way of setting up a connection. If '**Enforce Connection**' doesn't succeed apparently, please change the serial port parameter of GPS COM0 manually to the PCs parameters.

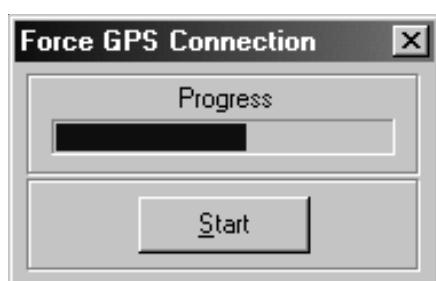

Online Help

The online help can be started by clicking the menu item 'Help' in menu Help. In every program window a direct access to a related help topic can be obtained by pressing F1. The help language can be selected by clicking the menu items Deutsch/Englisch in the Help Menu.

